



Sicherheitshinweise


- Vor der Inbetriebnahme die Betriebsanleitung lesen.
- Anschluss, Montage und Einstellung nur durch Fachpersonal.
- Gerät bei Inbetriebnahme vor Feuchte und Verunreinigung schützen.
- Kein Sicherheitsbauteil gemäß EU- Maschinenrichtlinie.
- Bestimmungsgemäße Verwendung.

Konformitäten und Zertifikate


Auf www.sick.com finden Sie Konformitätserklärungen, Zertifikate und die aktuelle Betriebsanleitung des Produkts. Dazu im Suchfeld die Artikelnummer des Produkts eingeben (Artikelnummer: siehe Typenschild-eintrag im Feld „P/N“ oder „Ident. no.“).

Applikationsinformationen

Einbau in Behälter (seitliche Montage)
Der Abstand A ≥ 40 mm.
Sensorspitze B = 8 mm.
Die Kegelspitze soll in den Behälter hineinragen.

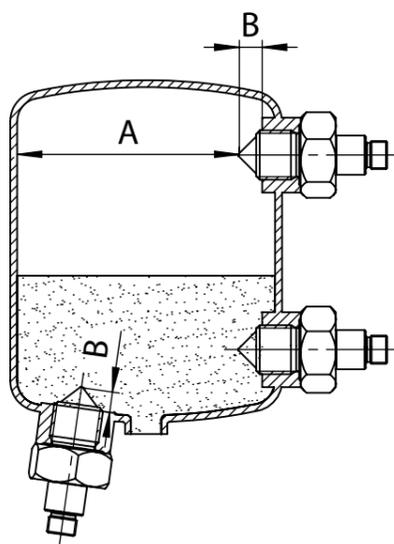

Einbau in einer Rohrleitung für Pumpentrockenlaufschutz. A ≥ 40 mm

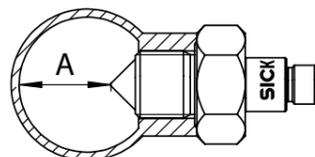


Hinweis


Stark belagbildende Flüssigkeiten können zur Ablagerungen am Sensor führen und die Funktion stören. Applikationen mit Schaum:
 ■ Schaum mit geringer Schaumdichte wird vom GRF18S nicht erkannt.
 ■ Schaum mit hoher Schaumdichte kann vom GRF18S erkannt werden und zu Fehlschaltungen führen.

Anschlussart und - schema

Stecker M12x1, 4-polig

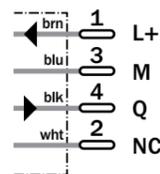

Maßzeichnung

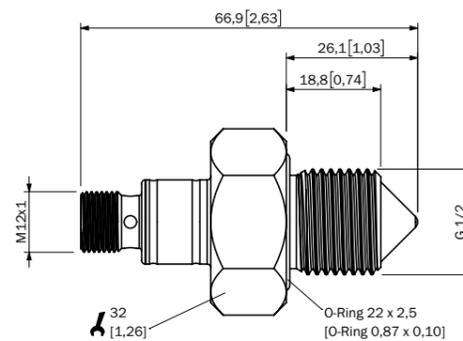

Technische Daten

	GRF18S
Medium	Flüssigkeiten
Erfassungsart	Grenzstand
Lichtsender	LED
Lichtart	Rotlicht
Wellenlänge	650 nm
Prozesstemperatur	-25 °C ... +55 °C
Prozessdruck	-0,5 bar ... +16 bar
UL-Zertifikat	✓
Medienberührende Werkstoffe	Edelstahl 1.4404, Polysulfon, FPM
Gehäusematerial	Edelstahl 1.4404
Prozessanschluss	G 1/2
Versorgungsspannung ¹⁾	10 V DC ... 30 V DC
Restwelligkeit ²⁾	≤ 5 Vss
Stromaufnahme	≤ 30 mA bei 24 V ohne Ausgangslast
Schutzklasse	III
Anschlussart	M12x1, 4-pol.
Ausgangssignal ³⁾	1x PNP, 1x NPN
Schaltart	Öffner, Schließer
Signalspannung HIGH	PNP VS - (≤ 3 V) NPN Approx. VS
Signalspannung LOW	PNP ca. 0 V NPN ≤ 3 V
Ausgangsstrom ³⁾	≤ 100 mA
Ansprechzeit	< 10 ms
Schaltfolge ⁴⁾	250 Hz
Schutzart	IP 67: EN 60529, IP 69K: EN 40050
Umgebungstemperatur Betrieb	-25 °C ... +55 °C
Umgebungstemperatur Lager	-25 °C ... +70 °C

¹⁾ U₋Anschlüsse verpolsicher.

²⁾ Darf U₋-Toleranzen nicht über- oder unterschreiten.

³⁾ Ausgang überstrom- und kurzschlussfest.

⁴⁾ Bei Hell-Dunkel-Verhältnis 1:1.

Wartung

GRF18S ist wartungsfrei. Wir empfehlen in regelmäßigen Abständen

- Das Sondenprisma auf Verschmutzung zu überprüfen
- Die Verschraubungen und Steckverbindungen zu überprüfen.

Rücksendung

Unbedenklichkeitserklärung (Kontaminationserklärung im Servicefall)

Spülen bzw. säubern Sie ausgebaute Geräte vor der Rücksendung, um unsere Mitarbeiter und die Umwelt vor Gefährdung durch anhaftende Messstoffreste zu schützen. Eine Überprüfung ausgefallener Geräte kann nur erfolgen, wenn das vollständig ausgefüllte Rücksendeformular vorliegt. Eine solche Erklärung beinhaltet alle Materialien, welche mit dem Gerät in Berührung kamen, auch solche, die zu Testzwecken, zum Betrieb oder zur Reinigung eingesetzt wurden.

Das Rücksendeformular ist über unsere Internet-Adresse (www.sick.com) verfügbar.

Entsorgung

Entsorgen Sie Gerätekomponenten und Verpackungsmaterialien entsprechend den einschlägigen landesspezifischen Abfallbehandlungs- und Entsorgungsvorschriften des Anliefergebietes.

	Füllstand	NO / NC	Schaltzustand	Kontrollleuchte
Überwachung Maximalfüllstand		Öffner	geschlossen	grün
Überwachung Maximalfüllstand		Öffner	offen	gelb
Überwachung Minimalzustand		Schließer	geschlossen	gelb
Überwachung Minimalzustand		Schießer	offen	grün

Ausgangssignal	Schaltart	Typ	Artikelnr.
1x PNP	Öffner	GRF18S-P234LV	1092957
	Schließer	GRF18S-F234LV	1092958
1x NPN	Schließer	GRF18S-E234LV	1092960
	Öffner	GRF18S-N234LV	1092959

Empfohlenes Zubehör

Kurzbeschreibung	Typ	Artikelnr.
Einschweißflansch G 1/2 aus 1.4404	BEF-FL-316G12-LMH1	4065669



- Australia**
Phone +61 3 9457 0600
- Austria**
Phone +43 22 36 62 28 8-0
- Belgium/Luxembourg**
Phone +32 2 466 55 66
- Brazil**
Phone +55 11 3215-4900
- Canada**
Phone +1 905 771 14 44
- Czech Republic**
Phone +420 2 57 91 18 50
- Chile**
Phone +56 2 2274 7430
- China**
Phone +86 20 2882 3600
- Denmark**
Phone +45 45 82 64 00
- Finland**
Phone +358-9-2515 800
- France**
Phone +33 1 64 62 35 00
- Germany**
Phone +49 211 5301-301
- Hong Kong**
Phone +852 2153 6300
- Hungary**
Phone +36 1 371 2680
- India**
Phone +91 22 4033 8333
- Israel**
Phone +972 4 6881000
- Italy**
Phone +39 02 274341
- Japan**
Phone +81 3 5309 2112
- Malaysia**
Phone +6 03 8080 7425
- Mexico**
Phone +52 472 748 9451
- Netherlands**
Phone +31 30 2044 000
- New Zealand**
Phone +64 9 415 0459
- Norway**
Phone +47 67 81 50 00
- Poland**
Phone +48 22 539 41 00
- Romania**
Phone +40 356 171 120
- Russia**
Phone +7 495 775 05 30
- Singapore**
Phone +65 6744 3732
- Slovakia**
Phone +421 482 901201
- Slovenia**
Phone +386 591 788 49
- South Africa**
Phone +27 11 472 3733
- South Korea**
Phone +82 2 786 6321
- Spain**
Phone +34 93 480 31 00
- Sweden**
Phone +46 10 110 10 00
- Switzerland**
Phone +41 41 619 29 39
- Taiwan**
Phone +886 2 2375-6288
- Thailand**
Phone +66 2645 0009
- Turkey**
Phone +90 216 528 50 00
- United Arab Emirates**
Phone +971 4 88 65 878
- United Kingdom**
Phone +44 1727 831121
- USA**
Phone +1 800 325 7425
- Vietnam**
Phone +84 945452999

Please find detailed addresses and further locations in all major industrial nations at www.sick.com

GRF18S

Optical level switch

EN



Safety instructions


- Read the operating instructions before starting operation.
- Connection, assembly, and settings only by competent technicians.
- No safety component in accordance with EU machine guidelines.
- Protect the device against moisture and soiling when operating.

Conformities and certificates


You can obtain declarations of conformity, certificates, and the current operating instructions for the product at www.sick.com. To do so, enter the product part number in the search field (part number: see the entry in the "P/N" or "Ident. no." field on the type label).

Application information

Use in tanks (side mounting)
The distance A ≥ 40mm (1.57).
Sensor prism B = 8 mm (0.31).
The conical prism is to project into the container.

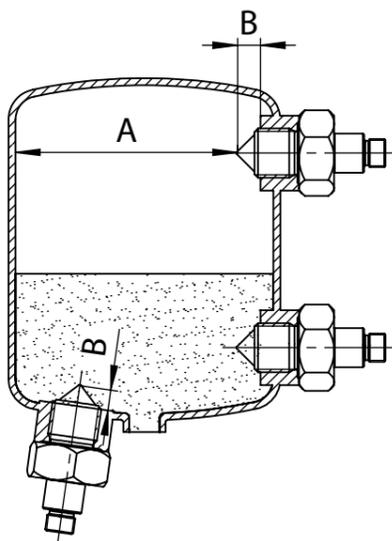

Installation in a pipe for dry running protection.
A ≥ 40 mm (1.57)

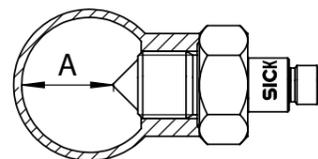


Note

Strong surface-forming liquids can lead to deposits on the sensor and affect the function.
Applications with foam:


- Foam with low density can't be detected by GRF18S.
- Foam with high density can be detected by GRF18S and can lead to faulty operation.

Connection type and diagram

Connector M12x1, 4-pin

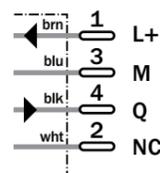

Dimensional drawing

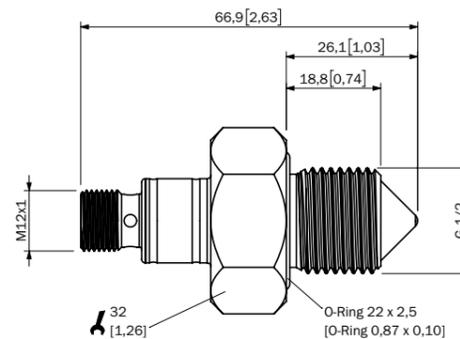

Technical data

	GRF18S
Medium	Fluids
Measurement	Switch
Light source	LED
Type of light	Red light
Wave length	650 nm
Process temperature	-25 °C ... +55 °C
Process pressure	-0.5 bar ... +16 bar
UL approval	✓
Wetted parts	Stainless steel 316L, polysulfone, FPM
Housing material	Stainless steel 316L
Process connection	G 1/2
Supply voltage ¹⁾	10 V DC ... 30 V DC
Ripple ²⁾	≤ 5 Vpp
Power consumption	≤ 30 mA at 24 V without output load
Protection class	III
Electrical connection	M12x1, 4-pin
Signal output ³⁾	1x PNP, 1x NPN
Switching mode	Normally closed, Normally open
Signal voltage HIGH	PNP VS - (≤ 3 V) NPN ca. VS
Signal voltage LOW	PNP approx. 0 V NPN ≤ 3 V
Output current ³⁾	≤ 100 mA
Response time	< 10 ms
Switching frequency ⁴⁾	250 Hz
Enclosure rating	IP 67: EN 60529, IP 69K: EN 40050
Ambient temperature, operation	-25 °C ... +55 °C
Ambient temperature, storage	-25 °C ... +70 °C

¹⁾ V_s connections reverse-polarity protected.
²⁾ May not exceed or fall short of V_s tolerances.
³⁾ Output overcurrent and short-circuit protected.
⁴⁾ With light/dark ratio 1:1.

Maintenance

The GRF18S is maintenance free.

- Check the prism for contamination
- Check the screw connections and plug connections.

Returned goods

Declaration of no objection (non-risk declaration in case of service work)
 Rinse off or clean removed devices before returning them in order to protect our employees and the environment from dangers of residue of measured materials.
 Failed devices can only be examined when accompanied by a completely filled-out return form. Such a declaration includes information about all materials which have come into contact with the device, including those which were used for testing purposes, operation, or cleaning.

The return form is available at our Internet site (www.sick.com).

Disposal

Dispose of device components and packaging materials in compliance with applicable country-specific waste treatment and disposal regulations of the region of use.

	Level	NO / NC	Switch status	Control LED
Max level control		Normally closed	Closed	Green
Max level control		Normally closed	Open	Yellow
Min level control		Normally open	Closed	Yellow
Min level control		Normally open	Open	Green

Signal output	Switching mode	Model name	Part No.
1x PNP	Normally closed	GRF18S-P234LV	1092957
	Normally open	GRF18S-F234LV	1092958
1x NPN	Normally open	GRF18S-E234LV	1092960
	Normally closed	GRF18S-N234LV	1092959

Recommended accessories

Brief description	Model name	Part No.
Weld-in flange G 1/2 in 1.4404	BEF-FL-316G12-LMH1	4065669



- Australia**
Phone +61 3 9457 0600
- Austria**
Phone +43 22 36 62 28 8-0
- Belgium/Luxembourg**
Phone +32 2 466 55 66
- Brazil**
Phone +55 11 3215-4900
- Canada**
Phone +1 905 771 14 44
- Czech Republic**
Phone +420 2 57 91 18 50
- Chile**
Phone +56 2 2274 7430
- China**
Phone +86 20 2882 3600
- Denmark**
Phone +45 45 82 64 00
- Finland**
Phone +358-9-2515 800
- France**
Phone +33 1 64 62 35 00
- Germany**
Phone +49 211 5301-301
- Hong Kong**
Phone +852 2153 6300
- Hungary**
Phone +36 1 371 2680
- India**
Phone +91 22 4033 8333
- Israel**
Phone +972 4 6881000
- Italy**
Phone +39 02 274341
- Japan**
Phone +81 3 5309 2112
- Malaysia**
Phone +6 03 8080 7425
- Mexico**
Phone +52 472 748 9451
- Netherlands**
Phone +31 30 2044 000
- New Zealand**
Phone +64 9 415 0459
- Norway**
Phone +47 67 81 50 00
- Poland**
Phone +48 22 539 41 00
- Romania**
Phone +40 356 171 120
- Russia**
Phone +7 495 775 05 30
- Singapore**
Phone +65 6744 3732
- Slovakia**
Phone +421 482 901201
- Slovenia**
Phone +386 591 788 49
- South Africa**
Phone +27 11 472 3733
- South Korea**
Phone +82 2 786 6321
- Spain**
Phone +34 93 480 31 00
- Sweden**
Phone +46 10 110 10 00
- Switzerland**
Phone +41 41 619 29 39
- Taiwan**
Phone +886 2 2375-6288
- Thailand**
Phone +66 2645 0009
- Turkey**
Phone +90 216 528 50 00
- United Arab Emirates**
Phone +971 4 88 65 878
- United Kingdom**
Phone +44 1727 831121
- USA**
Phone +1 800 325 7425
- Vietnam**
Phone +84 945452999

Please find detailed addresses and further locations in all major industrial nations at www.sick.com